

BSK Purifa Air Filtering Device

User Manual

1. Power connection

Connect the power cable of the device to the main power connection socket at the back (Figure 1). Make sure the switch on the socket is in the on position. There is a 10A glass fuse on the socket. If the device does not work even though you plug it in, first check this fuse to make sure it is intact.

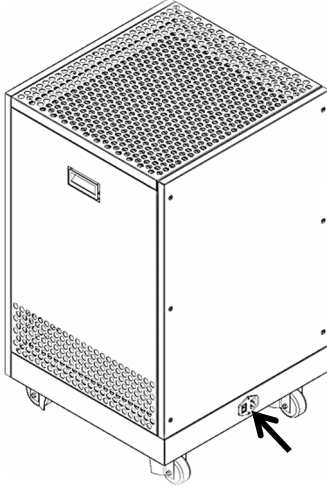


Figure 1

2. Fan on/off switch

It is the button marked on the device with the ON/OFF label (Figure 2). The red LED light is on when the button is on.

3. Fan speed control

You must turn the adjustment knob clockwise to increase the fan speed and counterclockwise to slow it down. The figures around the button show the fan speed, which you should approximate to the number of people in the room.

0				
Fan off	75 m ³ /h	150 m ³ /h	225 m ³ /h	300 m ³ /h

4. UV-C light on/off switch

It is the button on the device marked with a **UV-C** label (Figure 2). The green LED light is on when the switch is on. The UV-C lamp alone does not turn on, the fan switch must also be in the on position.

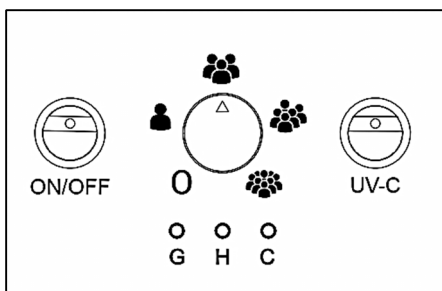


Figure 2

5. Filter warnings

They are warning lights that are labeled with G, H and C labels on the device (see Figure 2). The red LED lights up when the relevant filter is full and needs replacement.

G	H	C
G4 Filter	H13 HEPA Filter	Carbon Filter

6. Filter change

To replace the filter with lighted filling warning, open the service door of the device by removing the screws (Figure 3). Remove the relevant filter by pulling it towards you and close the service cover after you have replaced the clean filter, making sure that you tighten the screws of the service cover sufficiently.

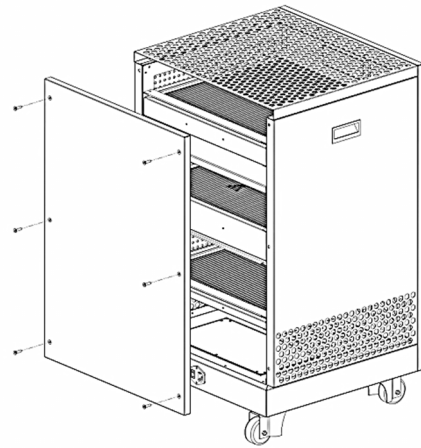


Figure 3

7. UV-C lamp change

UV-C lamp has a service time of 9000 hours. To replace the UV-C lamp, open the service cover of the device by unscrewing the screws (see Figure 3). After disconnecting the electrical connection of the device, pull out the UV-C lamp from the socket and close the service cover after replacing the new lamp, making sure that you tighten the screws sufficiently.

	<p>CAUTION!</p> <p>Before opening the service door, make sure that the device is turned off and power cable is unplugged.</p> <p>There is a safety switch for the service door in the device. While the service door is open, the fan and UV-C lamp do not work.</p> <p>Never look directly into the UV-C lamp and do not expose your skin to UV-C light for a long time.</p>
--	--

BSK Havalandırma Ekipmanları AŞ

Mimar sinan mah. Basra cad. No: 59/A Sultanbeyli, İstanbul

www.bskhvac.com.tr – 0 216 669 09 70